



## COMPATIBILITY LIST

### Mobile Phones

#### Cingular Compatibility

**Cingular (440-S1-HTC)**

2125, 8125, 8525

#### Dopod Compatibility

**Dopod (440-S1-HTC)**

900, 818 Pro, 838 Pro

#### HTC Compatibility

**HTC (440-S1-HTC)**

MTeoR, P3300, P3600, P4350, S620, TyTN

#### i-mate Compatibility

**i-mate (440-S1-HTC)**

JASJAR, SP3, SP3i, SP4m, JAMin, K-Jam, Jam,

**i-mate (418-S1-XDA)**

PDA2k

#### Kyocera Compatibility

**Kyocera (437-S1-KYC)**

Phantom Series, KE413, KE413C, KX413, KE414, KE414C, KX414, Rave/K10 Royale Phone Series, K9, K10, K433, K434, KE433, KE433C, KE434, KX433, KX434, Blade Phone Series, KE424C, KX424

#### LG Compatibility

**LG (438-S1-OLG)**

4010, 4011, 4015, 4020, 4050, 7050, A7110, B2050, C1200, C1300, C1500, C2000, C2200, C3300, C3310, C3320, CE500, CG300, F2250, F2400, F7200, F7250, F9100, F9200, L1100, L1150, L1200, L1400, L5100, P7200, S5200, U300, U8110, U8120, U8130, U8138, U8150, U8180, U8290, U8330, U8360, U8380, U880, U890.

**LG (460-S1-LGC)**

AX275, AX8600, CHOCOLATE, CHOCOLATE CHERRY, CHOCOLATE MINT, CHOCOLATE PINK, CHOCOLATE WHITE, EnV, LX150, VX8600, VX8700, VX9400, KG800, KG810, KG320, U970.



## Motorola Compatibility

### Motorola, square connector (409-S1-MRT)

A630, A830, A835, A920, A925, A1000, C331 and C332 (TDMA versions), C333 (CDMA with antenna), C341, C343, C353 (TDMA), C975, E310, E550, E1000, MPx220, ROKR, T280i, T300p, T720, T720i, T721, T721i, T722i, T730, T731, V70, V260, V262, V265, V300, V400, V500, V505, V525, V545, V547, V550, V551, V600, V620, V635, V710, V810, V975, V1050, V60, V60i, V60c, V60p(PTT), V60s, V60t, V60t Color, V60g, V60x, V66, V66i, V120c, 120t, 120x, 120c, 120e, 270c, 280, phones and V200 Personal Communicator.

### Mini USB connector (426-S1-MOT)

ic402, ic502, A780, E770v, E1070, L2, L6, PEBL, MOTOKRZR K1, MOTOKRZR K1m, MOTORAZR V3r, MOTORAZR V3t, MOTORAZR V3xx, red MOTORAZR V3m, RAZR V3, RAZR V3c RAZR V3i, RAZR V3m, RAZR V3x, MOTORIZR Z3, MOTOSLVR L7c, V360, V360v, SLVR, V190, V195, V197, V235, V323, V323i, V325, V325i, V360, V361, V365, W315

### Motorola (454-S1-MT3)

C113, C113a, C115, C139, C155, C200, C300, C331 (GSM version), C332 (GSM version), C333 (GSM version), C350 (without antenna), C336, C450, C550, T190, T191, T193, T193m, V150, T2260, T2282, T2290, T2297, V.Series™ V2260, V2267, V2282, V2290, V2297, V2397, V220, V220 PINK

## Nextel Compatibility

### Nextel (439-S1-NEX)

2004 NASCAR NEXTEL Cup Series™ Driver Phones, NASCAR NEXTEL Cup Series™ Driver Phones, i205, i265, i275, i305, i315, i325, i325 IS, i355, i530, i560, i605, i710, i730, i733, i760, i830, i836, i850, i860, i870, i930

## Nokia Compatibility

### Nokia, standard round connector (406-S1-NKT)

E60, E70, 1100, 1101, 1110, 1110i, 1112, 1221, 1260, 1261, 1600, 2115i, 2116i, 2125i, 2126i, 2128i, 2260, 2270, 2285, 2300, 2310, 2600, 2610, 2650, 2652, 3100, 3105, 3108, 3120, 3200, 3205, 3220, 3230, 3285, 3300, 3350, 3360, 3361, 3390, 3395, 3510, 3510i, 3520, 3530, 3560, 3570, 3585, 3585i, 3586, 3586i, 3587i, 3588i, 3589i, 3590, 3595, 3600, 3620, 3650, 3660, 5100, 5140, 5140i, 5210, 5510, 6010, 6015i, 6016i, 6019i, 6020, 6021, 6030, 6060, 6061, 6100, 6108, 6170, 6200, 6220, 6225, 6230, 6230i, 6235i, 6236i, 6255i, 6256i, 6260, 6310, 6310i, 6340, 6340i, 6360, 6370, 6385, 6510, 6560, 6585, 6590, 6590i, 6600, 6610, 6610i, 6620, 6630, 6650, 6651, 6670, 6680, 6681, 6682, 6800, 6810, 6820, 6822, 7200, 7210, 7250, 7250i, 7260, 7270, 7280, 7360, 7380, 7600, 7610, 7650, 7700, 7710, 8260, 8265, 8265i, 8270, 8290, 8310, 8390, 8800, 8801, 8910, 8910i phones, 9210i, 9290, 9300, 9300i, 9500 Communicators, N-Gage and N-Gage QD

### Nokia, small round connector (434-S1-NNK)

N70, N71, N72, N73, N80, N80ie, N800, N90, N91, N918GB, N92, N93, E50, E61, E62, 770, 2865i, 3155i, 3250, 5200, 5300, 5500, 6070, 6080, 6086, 6085, 6101, 6102, 6102i, 6103, 6111, 6125, 6126, 6131, 6133, 6136, 6151, 6155i, 6165i, 6233, 6265i, 6270, 6280, 6300, 7360, 7370, 7373.

## O2 XDA Compatibility

### O2 XDA (440-S1-HTC)

XDA Exec, XDA Mini Pro, XDA Mini S, XDA SP, XPhone II, XPhone IIIm, Cosmo

### O2 XDA (418-S1-XDA)

XDA IIs

## Orange Compatibility

### Orange (440-S1-HTC)

SPV C500, SPV C550, SPV M500, SPV C600, SPV M600 and SPV M3000

### Orange (418-S1-XDA)

SPV M2000



### Qtek Compatibility

**Qtek (440-S1-HTC)**

8010, 8020, 9100, 9000, S100, S110, S200,

**Qtek (418-S1-XDA)**

9090

### Sagem Compatibility

**Sagem (413-S1-SGM)**

myX- series, SG321i, myZ-3, SG322i, myV-55, myV-56, myV-65, myV-75, myV-76, Vodafone Simply, 3000 series (except 3078, 3088, WA3050), 900 series

### Samsung Compatibility

**Samsung, flat connector (407-S1-SST)**

SCH-A210, SCH-A310, SCH-A399, SCH-A475, SCH-A505, SCH-A509, SCH-A530, SCH-A539, SCH-A563, SCH-A564, SCH-A570, SCH-A591, SCH-A592, SCH-A595, SCH-A599, SCH-A610, SCH-A650, SCH-A670, SCH-A795, SCH-A809, SCH-N181, SCH-N181, SCH-N182, SCH-N191, SCH-N195, SCH-N288, SCH-N330, SCH-N370, SCH-N375, SCH-X199, SCH-X209, SCH-X309, SCH-X319, SCH-X359, SGH-A200, SGH-A288, SGH-A300, SGH-A308, SGH-A400, SGH-A408, SGH-A500, SGH-A561, SGH-A608, SGH-A800, SGH-C100, SGH-C130, SGH-C207, SGH-C225, SGH-C417, SGH-D100, SGH-D307, SGH-D347, SGH-D357, SGH-D407, SGH-D415, SGH-D500, SGH-D600, SGH-E100, SGH-E105, SGH-E300, SGH-E315, SGH-E316, SGH-E317, SGH-E330, SGH-E330N, SGH-E350, SGH-E335, SGH-E370, SGH-E400, SGH-E600, SGH-E630, SGH-E635, SGH-E700, SGH-E710, SGH-E715, SGH-E760, SGH-E770, SGH-E800, SGH-K528, SGH-N200, SGH-N400, SGH-N500, SGH-N620, SGH-N625, SGH-N628, SGH-P107, SGH-P207, SGH-P400, SGH-P408, SGH-P510, SGH-P735, SGH-Q100, SGH-Q200, SGH-Q208, SGH-Q300, SGH-R200, SGH-R208, SGH-R210, SGH-R210S, SGH-R220, SGH-R225, SGH-R225M, SGH-S100, SGH-S200, SGH-S208, SGH-S300, SGH-S300M, SGH-S307, SGH-S308, SGH-S500, SGH-T100, SGH-T108, SGH-T200, SGH-T208, SGH-T209, SGH-T309, SGH-T319, SGH-T410, SGH-T400, SGH-T408, SGH-T500, SGH-T609, SGH-T619, SGH-T709, SGH-T719, SGH-V100, SGH-V200, SGH-V205, SGH-V206, SGH-X100, SGH-X105, SGH-X426, SGH-X427, SGH-X427M, SGH-X450, SGH-X460, SGH-X475, SGH-X480, SGH-X495, SGH-X497, SGH-X507, SGH-X600, SGH-X640, SGH-X660, SPH-A420, SPH-A580, SPH-A640, SPH-A900, SPH-M500, SPH-T100,

**Samsung (437-S1-KYC)**

SPH-A920, SPH-A940, SPH-A820, SPH-A560, SPH-A880, SPH-A800, SPH-A740, SPH-A760, MM-A700, VM-A680, SPH-A660, SPH-A600, VGA1000, SPH-N400, SPH-A500, SPH-N240, SPH-A460.

**Samsung (467-S1-SAM)**

SPH-M610, SCH-U420, SGH-D807, SGH-D900, SGH-I607, SGH-T519, SGH-T509, SGH-T809, SGH-T629, SGH-D520, SGH-D800, SGH-D830, SGH-D807, SGH-E550, SGH-780, SGH-E870, SGH-E900, SGH-P300, SGH-T509, SGH-T809, SGH-V804, SGH-X820, SGH-X830, SGH-Z150, SGH-Z400, SGH-Z510, SGH-Z540.

### Sanyo Compatibility

**Sanyo (453-S1-SYO)**

MM-5600, MM-7400, MM-7500, MM-8300, MM-9000, PM-8200, RL-4920, RL-4930, SCP-200, SCP-2400, SCP-3100, SCP-4900, SCP-5300, SCP-5400, SCP-5500, SCP-7200, SCP-7300, SCP-7500, SCP-8100, SCP-8200, SCP-8400, VI-2300, Katana and MVP.

### Sharp Compatibility

**Sharp (417-S1-SHP)**

903, 902, 802, 703, GX30i, GX30, GX25, GX20, GX17, GX15, GX10i, GX10, GX1



## Siemens Compatibility

### Siemens (410-S1-SMT)

A35, A36, A40, A50, C25, C28, C35, C35i, C45, M35, M35i, M45, M50, ME45, MT50, S25, S35, S35i, S45, S45i, SL42, SL45, SL45i,

### Siemens (412-S1-SMT)

A51, A52, A53, A55, A57, A60, A62, A65, A70, A75, AL21, AL72, AL75, AL76, AX21, AX72, AX75, AX76, C55, C60, C62, C65, C70, C72, C75, CC55, CC60, CC62, CC65, CC70, CC72, CC75, CF62, CF75, CF110, CFX65, CL75, CX65, CX70, CX75, M55, M60, M65, M75, MC55, MC60, MC65, MC75, ME75, S55, S65, S75, SP55, SP65, SP75, SF65, SK65, SL55, SL65, SL75, SG75, SXG75, SX1.

## Sony Ericsson Compatibility

### Sony Ericsson, square connector (408-S1-SET)

A2218z, A2618, A2618s, A2628, A3618s, F500i, J210i, J300i, K300i, K500i, K508i, K600i, K608i, K700i, P800, P900, P910i, R300d, R300LX, R300z, R320, R320s, R380 WORLD, R380e, R380s, R520m, R600, S700i, T20e, T20s, T28 WORLD, T28z, T29, T29s, T39m, T60c, T60d, T61c, T61d, T61LX, T61z, T62u, T65, T66, T68, T68i, T100, T105, T200, T226, T230, T290i, T300, T306, T310, T316, T600, T610, T616, T620, T630, V600i, V800, Z200, Z300i, Z600, Z800i, Z1010

### Sony Ericsson, Fast port system connector (428-S1-SEN)

D750i, J100a, J100c, J100i, J110i, J120i, J220a, J220c, J230c, J220i, J230i, K200i, K220i, K310a, K310c, K310i, K510a, K510c, K510i, K550i, K550im, K610i, K610im, K618i, K750c, K750i, K758c, K790a, K790c, K790i, K800i, K810i, M600i, M608c, P990i, V630i, W200a, W200i, W300c, W300i, W550i, W550c, W580i, W600, W600c, W600i, W610i, W660i, W700c, W700i, W710c, W710i, W712a, W800, W800i, W800c, W810c, W810i, W830c, W830i, W850i, W880i, W900c, W900i, W950i, W958c, Z610i, Z710c, Z710i, Z520a, Z520c, Z520i, Z525a, Z525i, Z530c, Z530i, Z550a, Z550c, Z550i, Z558c, Z558i, Z610i, Z710i, Z750i.

## Sprint Compatibility

### Sprint (437-S1-KYC)

Sprint PM-8920, Sprint VI600, Cingular 8125

## T-Mobile Compatibility

### T-Mobile (440-S1-HTC)

MDA Vario, MDA Vario with Co-Pilot, MDA, MDA Pro, MDA Compact II, SDA, SDA Music, Dash

### T-Mobile (418-S1-XDA)

MDA III

## PDA Compatibility

## BlackBerry Compatibility

### BlackBerry Mini USB connector (426-S1-MOT)

6210, 6220, 6230, 6280, 6510, 7100g, 7100i, 7100r, 7100t, 7100v, 7100x, 7105t, 7130e, 7210, 7230, 7250, 7270, 7280, 7290, 7510, 7520, 8100 (Pearl), 8700c, 8700f, 8700g, 8703e



### Palm Compatibility

<b>Palm (419-S1-PLM)</b>
m515, m505, m500, m130, Zire 71, Tungsten T3, Tungsten T, Tungsten T2, Tungsten C, and Tungsten W.

<b>Palm (427-S1-TRE)</b>
Palm® TX / Tungsten™ E2, T5 / LifeDrive™, LifeDrive™ Showtime / Treo™ 650, 680, 700p, 700w, 700wx

<b>Palm (440-S1-HTC)</b>
Z22

<b>Palm (437-S1-KYC)</b>
Tungsten E, Zire 72

### Sony Clié Compatibility

<b>Sony Clié (421-S1-SYC)</b>
PEG-NR, PEG-NX, PEG-SJ, PEG-SL, PEG-T, PEG-TG and PEG-TJ series

## MP3 Players

### Creative Compatibility

<b>Creative Zen Mini USB connector (457-S1-CTV)</b>
ZEN V Plus, ZEN V, ZEN Micro, ZEN MicroPhoto, ZEN Neon, MuVo Slim

<b>Creative Zen Round connector (442-S1-PSP)</b>
ZEN, ZEN Touch, ZEN Vision, ZEN Vision:M, MuVo², MuVo² FM

### iPod Compatibility

<b>iPod cable (422-S1-IPD)</b>
iPod 3 <sup>rd</sup> and 4 <sup>th</sup> generation, iPod mini, iPod Nano, iPod Photo, iPod Video

<b>USB adapter (441-S1-APP)</b>
iPod 3 <sup>rd</sup> and 4 <sup>th</sup> generation, iPod mini, iPod Nano, iPod Photo, iPod Video
<b>NOTE: Not compatible with iPod Shuffle.</b>

### iRiver Compatibility

<b>iRiver Mini USB connector (426-S1-MOT)</b>
T10 series, T30 series, PMP-100 series, PMC-100 series, H300 Series, iGP-100, iFP-1000 series, iFP-900 series, iFP-800 series, iFP-700 series, iFP-300 series, N10.

### Sony Walkman Compatibility

<b>USB Adapter (441-S1-APP)</b>
20GB Sony Walkman

### Zune Compatibility

<b>Zune through USB cable (441-S1-APP)</b>
30GB Zune digital media player



## Game consoles

### Nintendo

<b>Nintendo Gameboy connector (429-S1-GBY)</b>
--

Original Style Nintendo DS and Game Boy Advance SP
--

### Sony

<b>Sony PSP connector (442-S1-PSP)</b>
--

Sony PSP
----------

## GPS

### Garmin

<b>Garmin Mini USB connector (426-S1-MOT)</b>
---

Forerunner 205, Forerunner 203, Forerunner 301, Edge 205, Edge 305.
---

## Universal connectors

### Female USB cable

<b>Female USB cable (441-S1-APP)</b>
--------------------------------------

USB LED light cluster,
------------------------

<b>Apple iPod through USB cable (441-S1-APP)</b>
--

iPod 3 <sup>rd</sup> and 4 <sup>th</sup> generation, iPod mini, iPod Nano, iPod Photo, iPod Video
---

<b>NOTE: Not compatible with iPod Shuffle.</b>
--

<b>Sony Walkman through USB cable (441-S1-APP)</b>
--

20GB Sony Walkman
-------------------

<b>Zune through USB cable (441-S1-APP)</b>
--

30GB Zune digital media player
--------------------------------

### 12V cigarette lighter adapter

<b>12V cigarette lighter adapter (423-S1-CIG)</b>
---

Compatible with most car chargers
-----------------------------------

*Note: device greyed out are either in the process of approval or need to be ordered.*